



V-Quantum Hardware and Reference Manual

October 2017
Rev 1.2

Last valid version: 2.2.4



V-Quantum HW Manual

Index

Index	2
CE Declaration of Compliance	5
Introduction.....	6
I.1 Audio commentary position with video stream decoder	7
I.2 AES67 / DANTE remote audio commentary position	8
I.3 Plain Audio codec operation over SIP or BRAVE	9
I.4 Common features	9
I.5 The set of Manuals	10
I.6 Application Notes	11
Audio controls	12
II.1 Input audio path overview	13
II.2 Gain controls for audio inputs	13
II.2.1 Sensitivity of the audio gain knobs.....	15
II.3 Headphone controls.....	15
II.3.1 Headphone volume control	16
II.3.2 Headphone sound mix control	16
II.3.3 Headphone preferences	18
II.3.3.1. Headphone L/R independent mono set up	18
II.3.3.2. Headphone independent stereo set up	19
II.3.3.3. Headphone panoramic set up	19
II.4 Analogue audio input arrangements	20
II.5 Digital audio input (USB) arrangements.....	22
Audio & video outputs	23
III.1 Digital video output (DVI)	23
III.2 Digital audio output (USB-AUDIO)	24

V-Quantum HW Manual

III.3 Digital audio input/output (AES67 / DANTE)	25
III.4 Analogue audio output (rear XLR)	25
Operation.....	26
IV.1 Audio input routing matrix	26
IV.1.1 One example of input matrix layout (with BRAVE protocol)	27
IV.2 Audio commentary with video stream decoder	29
IV.2.1 Control	29
IV.2.2 Configuration.....	30
IV.2.2.1. Video Decoder	30
IV.2.2.2. Audio associated to video	30
IV.2.2.3. Monitoring.....	32
Audio Menu Options	33
V.1 Input Menu	33
V.2 Input Matrix Menu	34
V.3 Audio Outputs Menu.....	36
V.4 Misc Menu.....	38
V.5 Encoders menu.....	39
V.6 Audio Test menu.....	39
V.7 Audio Gain Level Inputs menu	40
Other interfaces	41
VI.1 Vu-meter indication	41
VI.2 Ethernet ports - the LAN1 and LAN2 Connector.....	42
VI.3 USB Port for Wi-Fi	43
VI.4 3G/4G Connector	43
VI.5 RS232 port	43
VI.6 GPIO port	44
VI.7 Power supply	45
VI.7.1 Power and battery status.....	46
Technical Specifications.....	48
VII.1 Audio Interfaces.....	48

V-Quantum HW Manual

VII.1.1 IN1 - IN3 inputs in MIC MODE	48
VII.1.2 IN1 - IN4 inputs in LINE MODE	49
VII.2 Headphone 1 - 3 outputs.....	50
VII.3 AUX output.....	50
VII.4 USB Audio interface	51
VII.5 Compression	51
VII.6 Communication ports.....	51
VII.6.1 LAN port	51
VII.6.2 GPIO port.....	51
VII.6.3 RS232 port.....	51
VII.7 Power supply.	51
VII.8 Weight and dimensions.....	52
DIP Switches and battery installation	53
VIII.1 Restore factory default setting (microswitches)	53
VIII.2 Optional battery installation	54
VIII.3 Battery maintenance and precautions	56
VIII.3.1 Battery precautions	56

V-Quantum HW Manual


CE Declaration of Compliance

Procesamiento Digital y Sistemas S.L., hereby declares that V-Quantum bearing the CE168X parking are in compliance with Electromagnetic Compatibility Directive (2004/108/EEC), and the Low Voltage Directive (2006/95/EEC) of the European Union.

A "Declaration of conformity" for V-Quantum is available on file at Prodys offices in Spain. To obtain this information, contact with sales@prodys.net.

CAUTION

V-Quantum uses a Lithium battery.
Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturers' instructions.

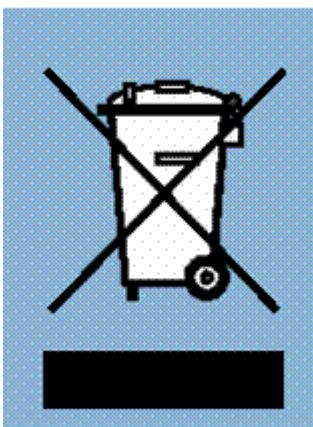

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol with black bar underneath is attached to a product it means that product is covered by the European Directive 2002/96/EC.

Please, inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

V-Quantum HW Manual

Chapter I

INTRODUCTION

V-Quantum is a powerful portable IP audio codec, but enabled to play out H.264 video @BRAVE protocol, providing an enriched working commentary unit for reporters. Therefore this device simplifies the voice-over commentaries to video media.

BRAVE protocol supports several IP links between the codecs assuring a highly reliable audio and video connection with the master control room.


3x mic/line mono inputs +1 line/International Sound input + 1 Stereo USB input/output) are available to be mixed, encoded and streamed in Stereo mode. Additionally the device provides digital video output for the H.264/BRAVE video stream display.




Several application scenarios might be possible with V-Quantum:

V-Quantum HW Manual

I.1 Audio commentary position with video stream decoder

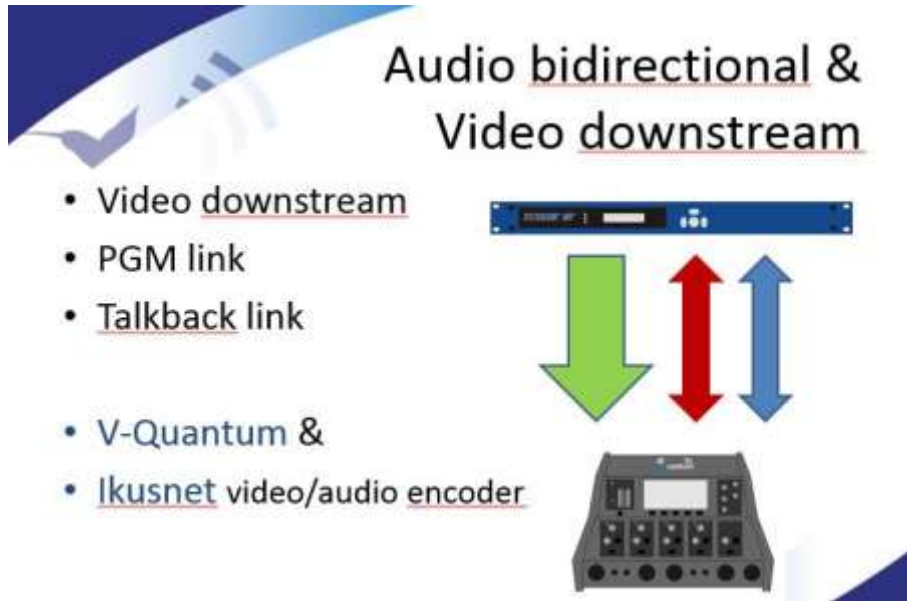


V-Quantum can handle three different streams at the same time, as shown in the following diagram:

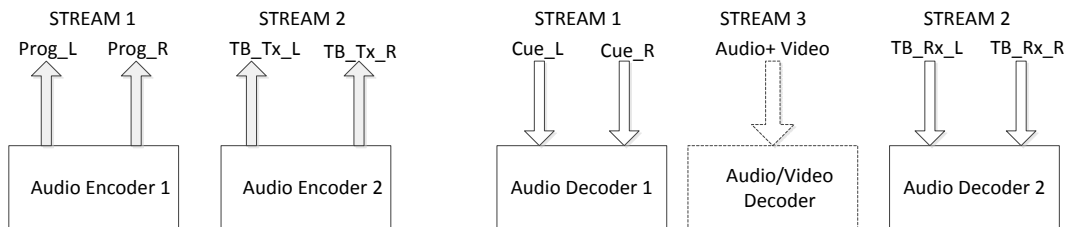

Apart from the possibility of using three streams for different communications, it is still possible to use the rest of the system resources. This has been summarize in this diagram:

V-Quantum HW Manual

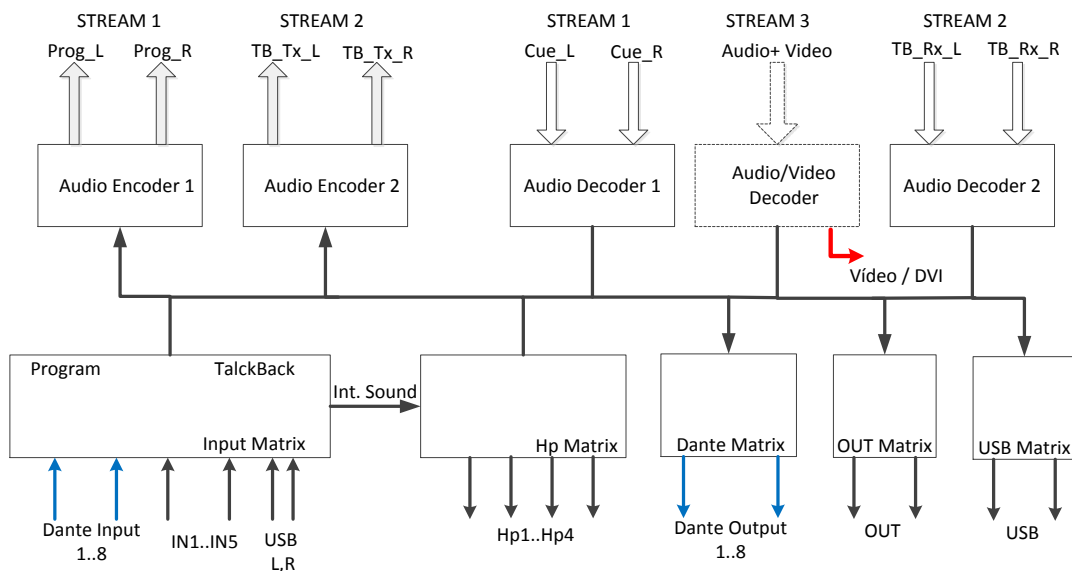

The decoded video goes directly to the DVI output and the associated audio is routed to any of the available matrices:


- Input matrices to be sent back to Program or Talkback.
- Headphone output.

I.2 AES67 / DANTE remote audio commentary position



V-Quantum HW Manual

I.3 Plain Audio codec operation over SIP or BRAVE¹

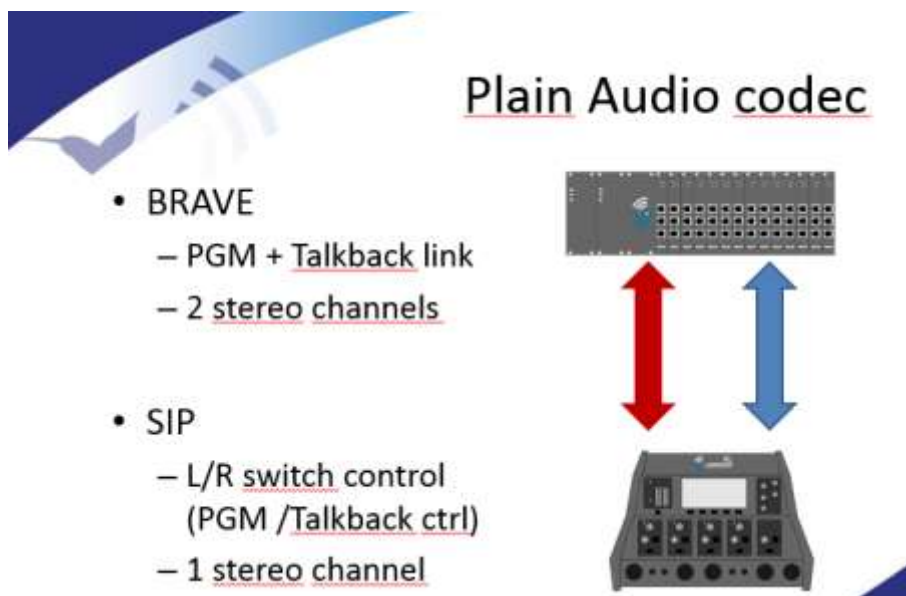

I.4 Common features

Common features are²:

- **Analog Audio:** V-Quantum provides audio mixer and routing matrix for any audio input. Three headphone outputs, one line stereo audio output and one USB audio input/output are available as well. Keyboard, knobs and touch panel enables quick and user friendly balance and routing control of the audio signals.
- **Compression algorithms:** V-Quantum is supports with full range of compression algorithms: G711, G722, PCM, MPEG1,2 Layer II, MPEG 2,4 AAC LC, MPEG4 AAC LD, ELD & HE, OPUS and Enhanced apt-X. Video decoder supports H.264 streams over BRAVE protocol.

¹ Please refer to “Quantum User Manual” for detailed parameter setting and protocols operation.

2 Please review standard and optional features of this product at our web site.

V-Quantum HW Manual

- **Communications:** IP, 3G/4G, Wi-Fi or AES67/DANTE connectivity. With V-Quantum it is possible to establish three independent connections, one for audio program, other for coordination and a third for video reception. Bonding of up to 7 IP interfaces to get the maximum bandwidth and for secure audio streaming is also available.
- **Power supply:** AC/DC Power Converter and an optional battery which provides up to 3 hours of autonomy. The battery can be charged on the system and its status and level of charge can be monitored on the screen.
- **Auxiliary data:** the device includes a serial port (RS232) and a GPIO port with 2 inputs and 2 outputs. The auxiliary data can be sent/received along with the audio for remote control/signalling.
- **Control and monitoring:** The unit can be configured from its touch panel and from its embedded web server. The device is fully configurable via remote web browser. Support from the MCR for outside news teams is possible using **ProdysControlPlus**³ product; *as long as the unit is connected to the Internet, and even when the unit is connected to the internet behind a firewall.*
- **Small and lightweight:** Dimensions are width 270mm, height 85mm and depth 235mm. Weight is about 2.6Kg (*without battery*).

I.5 The set of Manuals

The [Quantum Family User Manual](#) is applicable to most of the common features provided by the Quantum Family of codecs.

For some specific features or restrictions, the user is referred to the proper [Hardware and Reference Manual](#) applicable to the codec in use. Installation requirements, physical and electrical parameters are also included in this document.

³ ProdysControlPlus is a software management product. For more details about please contact sales@prodys.net

V-Quantum HW Manual

If several different Quantum Family codecs are managed by means of the ProdysControlPlus application please refer to the [ProdysControlPlus Manual](#) as well.

Prodys IP codecs provide the user with a control protocol which allows the user to develop customized management software. The control interface for this protocol is either the RS232 serial port or the Ethernet port. For detailed description please refer to the [Quantum Family codec SDK User's Manual](#).

I.6 Application Notes

For specific subjects, [Applications Notes](#) and release update ([What is new](#), [ChangeLog ...](#)) the user is kindly referred to check our download area at www.prodys.net or contact support@prodys.net

V-Quantum HW Manual

Chapter II

AUDIO CONTROLS




The V-Quantum offers an intuitive and complete control interface.

Before unpacking the unit, please check its packaging for any signs of damage or mishandling during transportation. Report any damage to the shipping company immediately. Unpack the unit carefully, if you find any damage or the unit does not work correctly, you should contact Prodys or its distributor as soon as possible.

V-Quantum HW Manual

II.1 Input audio path overview

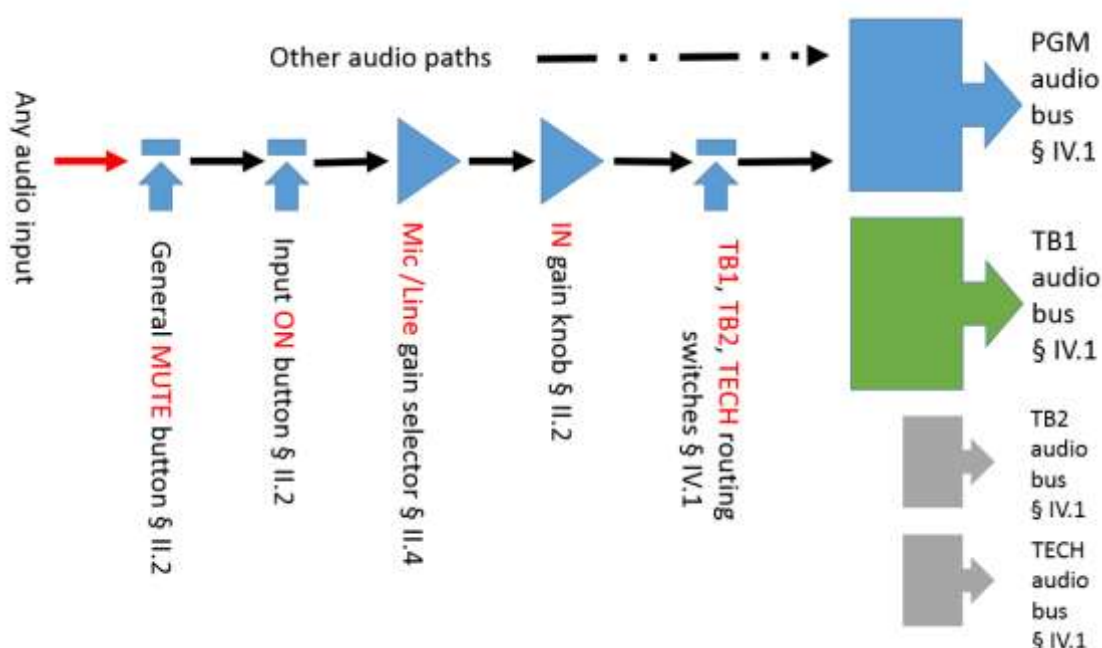

Any input audio (e.g. XLR or USB audio) follows its processing path under User adjustments or [PRESET](#) selection⁴.

Each input audio path (IN1..IN3, USB L, USB R) terminates at either the PGM, TB1, TB2⁵ or TECH bus. The PGM and the TB1 busses feed the PGM and Talkback encoders⁶ respectively prior upstreaming.

II.2 Gain controls for audio inputs

At the left hand side pressing the <**MUTE**> button will silence all audio inputs for the uplink as well as for the headphone and local XLR audience.

⁴ For details on PRESET configuration please refer to the QUANTUM USER MANUAL § IV.3

⁵ TB2 & TECH busses are not available for BRAVE or SIP protocol, but for AES67 /DANTE application since firmware version 3.0.


⁶ SIP protocol does not enable an independent “Talkback encoder”, but the operation of the TB1 switch can route this audio path into the L or R channel of a stereo upstreaming signal.

V-Quantum HW Manual

Each input is individually enabled with its <ON> button.




Any gain change gets a pop-up indication as this example

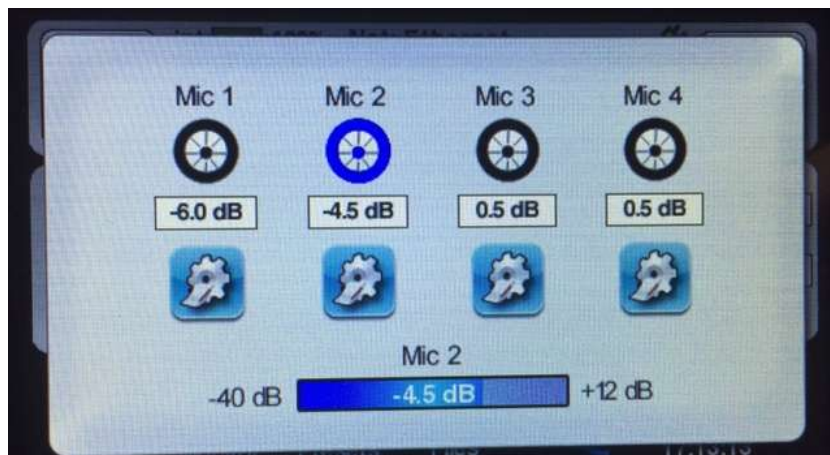

The audio level control can be made locally or remotely by using the V-Quantum web interface.


Remote input gain control might be possible getting into Menu /Audio /Gain Level:

V-Quantum HW Manual

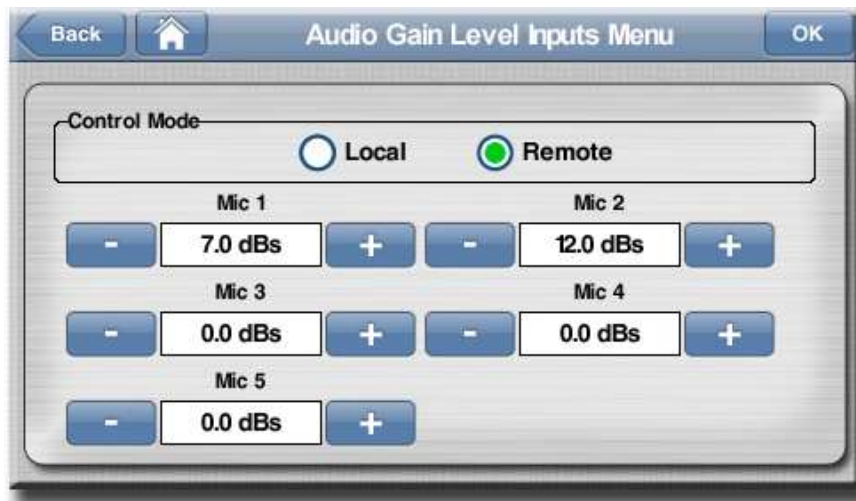

II.2.1 Sensitivity of the audio gain knobs

It is possible to adjust sensitivity of the gain knobs for the audio inputs as well as for the headphone knobs at Menu /Audio /Misc (*Resolution dBs/Turn*).

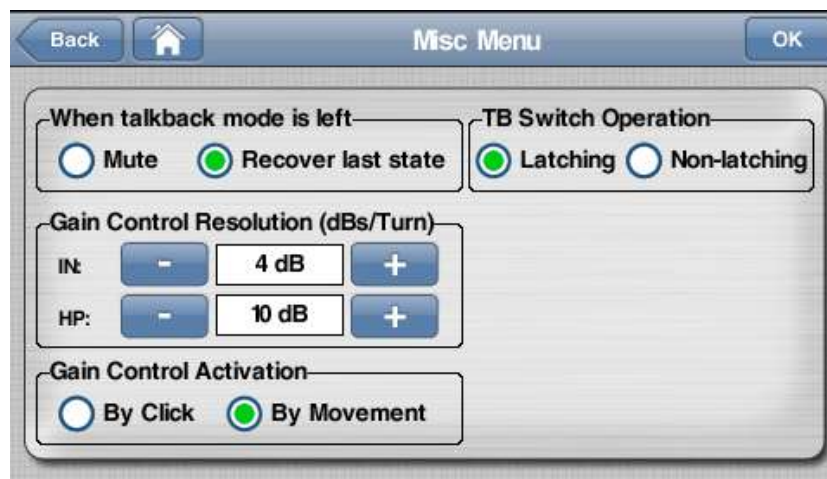

II.3 Headphone controls

In order to prevent pain due excessive sound pressure on the ears it is strongly advised to handle with care the headphone level configuration.

V-Quantum HW Manual

It is safe to manage any new streaming connection or new signal matrix with the headphone off the head, but around the neck. Adjust with gentle turns the correct sound level for each headphone (left and right side).

Once the average sound level is set, the user might use the headphones in a safe way.

II.3.1 Headphone volume control



Those are the headphone gain controls. Any headphone gain change gets a pop-up with the dB indication. A *green LED* indicates that following trims affect only *this* headphone output (*please to the picture above*).

II.3.2 Headphone sound mix control


V-Quantum HW Manual



Upon the HP selection, (just pressing once or trimming the HP knobs 1 .. 3), the user gets access to the Headphone Sound Mix for *his feedback* using the right hand group of knobs labelled **HP MATRIX**.


Each signal might be enhanced or dimmed trimming the knobs. Furthermore pressing once the HP Matrix knob, disable or enable the partial signal immediately from this headphone mix.

Please remind the **HP MATRIX** does not affect the encoded signal up or downstream.

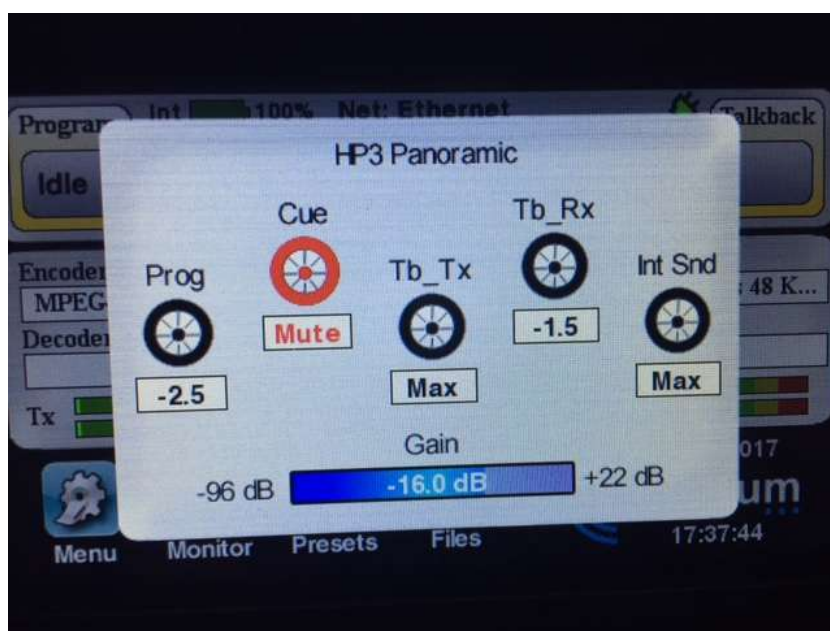

It is possible to change the audio assigned to each of the 5 audio sources for any headphone output. Just clicking on the name of the source, on top of the knob icon, the following window will appear:

V-Quantum HW Manual

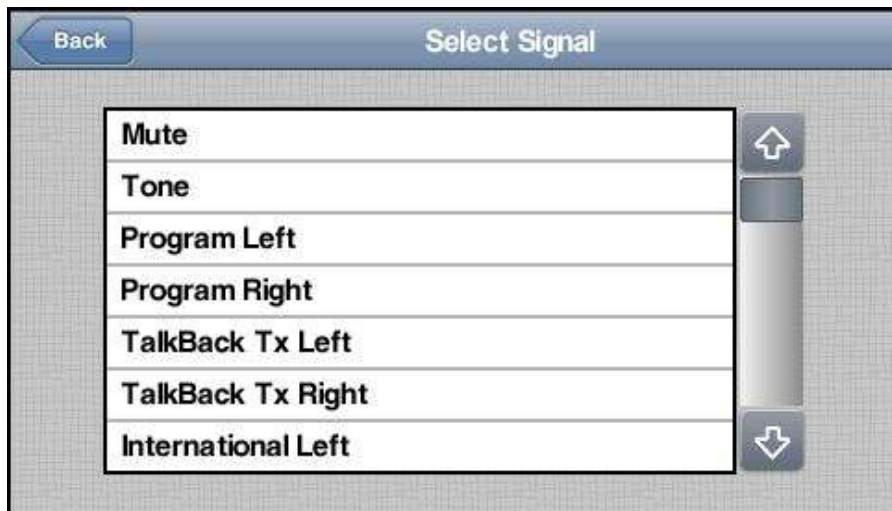

In the Select Signal window, all the audio signals managed inside the codec are available to be used as a headphone output.

II.3.3 Headphone preferences

Adjustment and balance of each headphone may be set in three different flavors. These three flavors can be selected are set [Menu /Audio /Outputs ..]:


- Independent Stereo control
- Independent Mono control (L & R)
- Panoramic control (Tx /Rx balance)

II.3.3.1. Headphone L/R independent mono set up

With the so-called Independent mono level control the headphone audio level can be adjusted independently for each ear. This mode is especially useful when L and R signals on the headphones are not related (binaural monitoring).

Pressing several times the HP gain knob, the user might trim the global L+R, L or R headphone.

V-Quantum HW Manual

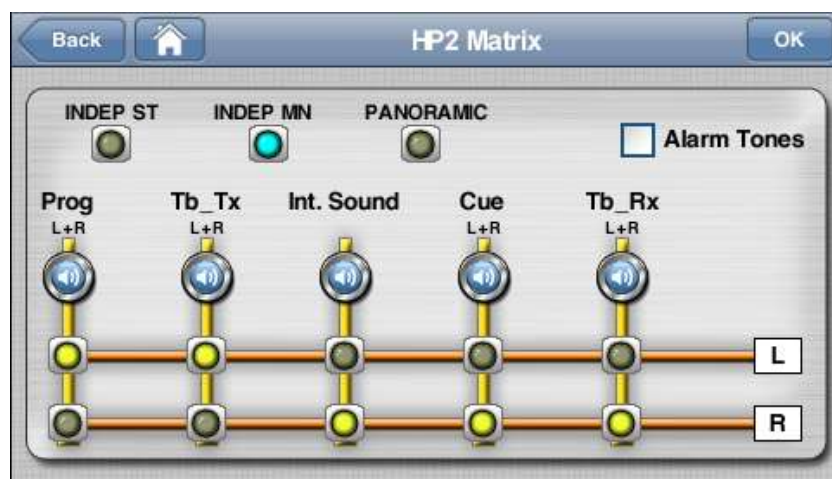

II.3.3.2. Headphone independent stereo set up

This control mode works in a similar way to the independent mono control, but keeping the left and right channels of the audio sources always coupled.





II.3.3.3. Headphone panoramic set up

This control is preferred by users uncomfortable with binaural monitoring; such prefer hearing the same audio composition on the left and right ear.

V-Quantum HW Manual

This mode is allows enhancing either the **local** (Tx) or the **far-end** (Rx) encoded sound on the headphones.

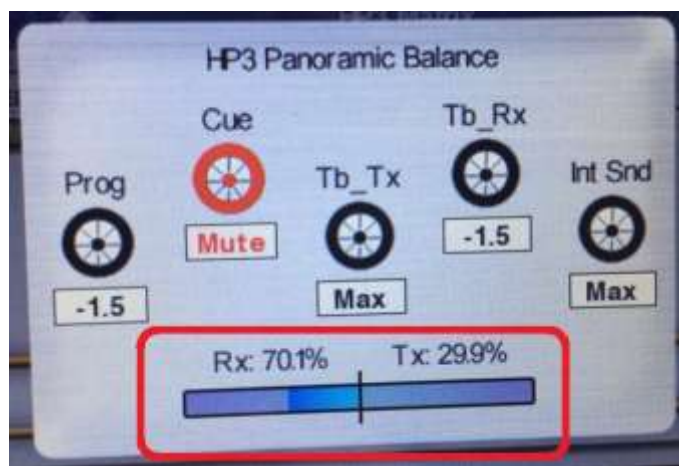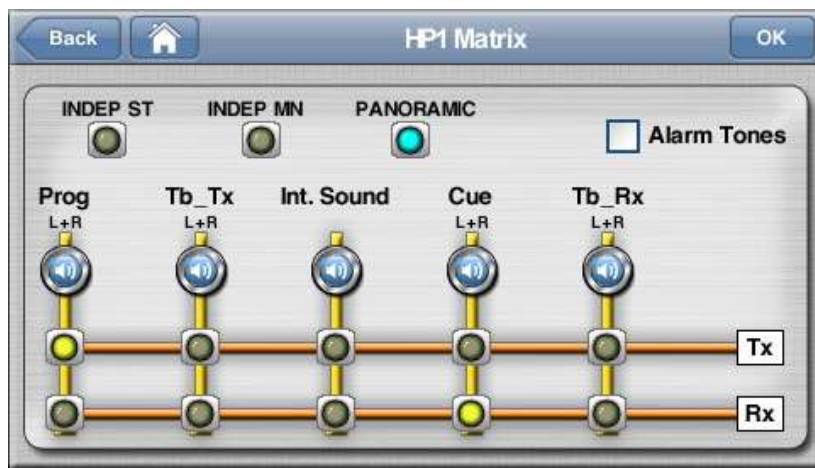

II.4 Analogue audio input arrangements

In the front panel there are two types of connectors: Jack connectors for the headphone outputs (3), and XLR connectors for analogue inputs (4):

V-Quantum HW Manual



There are three MIC/LINE XLR connectors and additionally one LINE level audio input. This menu is available at Menu /Audio /Inputs



The other parameters that can be set up per audio input:

- Compressor/Limiter (input overdriving protection)
- Automatic Gain Control (not applicable)
- High Pass Filter (Hum suppressor)
- Gain pad (pre-amp -18dB or 0dB)
- Gang input (IN2 & IN3 as stereo inputs)

If audio inputs are set up as MIC level inputs, sensibility range is -60dBu to -20dBu.

V-Quantum HW Manual

When phantom power is enabled, the whole gain is decreased by 15 dB to compensate for the higher output of condenser MICs. Thus, the gain range will go from -45 to -5dBu.

When the inputs are configured as LINE level inputs, the maximum input level will be +20dBu.

The audio level control can be achieved locally or remotely by using the V-Quantum web interface.

II.5 Digital audio input (USB) arrangements

The codec might intake mono & stereo digital signals over the **USB-AUDIO** interface (rear side). This signal might be mixed and routed as any other input audio. Please refer to § for detailed information about the audio routing matrix.

Optionally the user might assign /map gain knobs IN3 and IN4 to the digital audio input control. Please follow the procedure:

1. access Menu->System->Function Keys
2. assign button F4 to **USB Audio Control**
3. upon any F4 activation⁷ IN3 and IN4 gain knobs affects L & R of the digital audio input signal (**USB-AUDIO**)

V-Quantum USB-AUDIO interface is using 48kHz linear sampling. Please remind changing any USB device or laptop to the matching sampling frequency

⁷ Following activation of the F4 button returns the control of the IN3 and IN4 gain knobs to the XLR analogue inputs

V-Quantum HW Manual

Chapter III

AUDIO & VIDEO OUTPUTS



III.1 Digital video output (DVI)

The digital video output is available on the codec left side as DVI connector. Please notice that you might use DVI/HDMI connector if you prefer a HDMI display for visualization of the content.

Please notice DVI interface does not support audio signals, but the audio information is available as <CUE> signal on the routing matrix for headphones or for rear side XLR connectors.


V-Quantum HW Manual



III.2 Digital audio output (USB-AUDIO)

The digital audio output is the reverse input path. Only the rear side USB-AUDIO connector supports this function. Possible audio signals or combination of any mixed signal are: Program Left, Program Right, TalkBack Left and TalkBack Right.

The USB output matrix configuration is available at Menu /Audio /Outputs /USB.

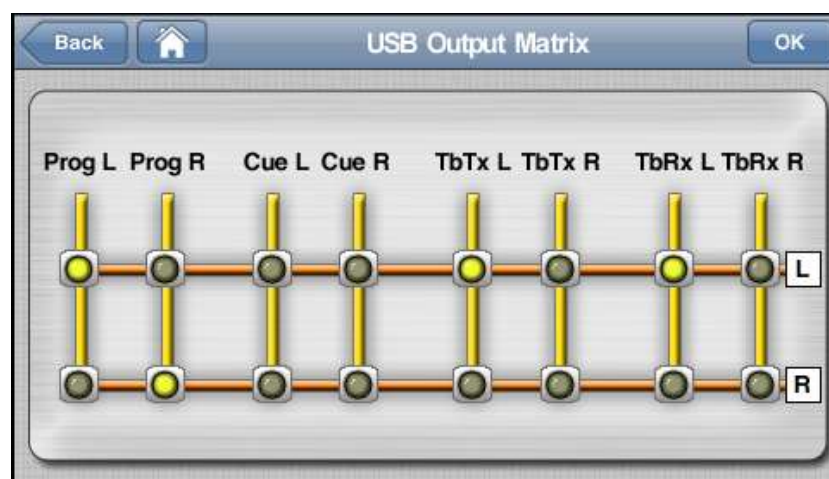

V-Quantum HW Manual

III.3 Digital audio input/output (AES67 / DANTE)


The AES67 /DANTE input & output configuration⁸ is set up using the DANTE Controller software provided by Audinate company. This Controller software must share the AES67 /DANTE local area network with V-Quantum

For computer requirements for using DANTE Controller software please refer to Audinate at <http://audinate.com>

III.4 Analogue audio output (rear XLR)

The analogue audio output is available at the rear side XLR connectors upon the proper output matrix configuration. Possible audio signals or combination of any mixed signal are: Program Left, Program Right, TalkBack Left and TalkBack Right.

The XLR output matrix configuration is available at Menu /Audio /Outputs /OUT.

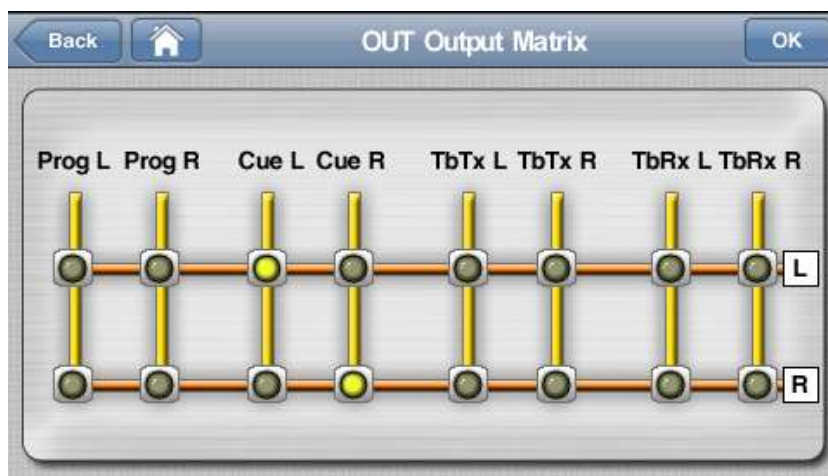

This configuration examples proposes getting the sound of the H.264 video/audio signal available at the rear side XLR connectors.

Please remind the AES67/DANTE interface is not available for the Video downlink and audio uplink application as described for § IV.2

V-Quantum HW Manual

Chapter IV

OPERATION

This chapter introduces operations

IV.1 Audio input routing matrix

V-Quantum provides three internal audio buses: PROGRAM bus (PGM), TALKBACK bus (TB1) and INTERNATIONAL SOUND bus (IntS).

Please notice the activation of any routing button (TB1, TB2 or TECH) routes its audio input to the proper internal audio bus. Deactivation of the routing buttons returns the audio input signal to the PGM bus (by default).

The input ON button enables or mute this input for any internal bus.



PGM and TB1 combine their own mix of audio inputs and feed their respective encoders.

Details the encoder configurations are available at the Quantum User Manual.

Please notice the encoder setting influences the audio quality and delay.

V-Quantum HW Manual

On the other hand the International Sound bus is available *locally* for headphones only. Any input assigned to the **IntS** bus is not available for any encoder and upstream purpose.

Walking thru Menu /Audio /Input Matrix leads to configuration of each internal bus.

For the sake of matching labels & function of external buttons with the configuration menu following equivalences are applicable:

PGM bus \leftrightarrow "TB switch Off"

TB1 bus \leftrightarrow "TB switch On"




IV.1.1 One example of input matrix layout (with BRAVE protocol)

The PGM matrix /mix is available at Menu /Audio /Input Matrix /**TB Switch OFF**'. Let us provide following example PGM configuration as the left hand matrix.

The Talkback matrix /mix is available at Menu /Audio /Input Matrix /**TB Switch ON**'. Let us provide following example talkback configuration as the right hand matrix.

V-Quantum HW Manual


PGM or TB1 is OFF

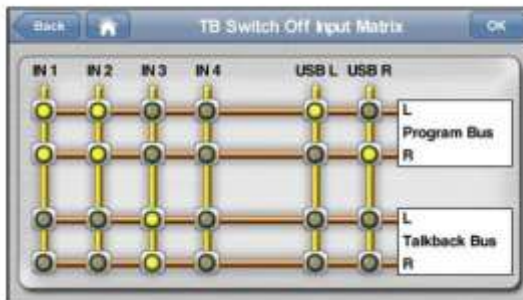

Talkback or TB1 is ON



The example for the International sound bus is arranged as following picture

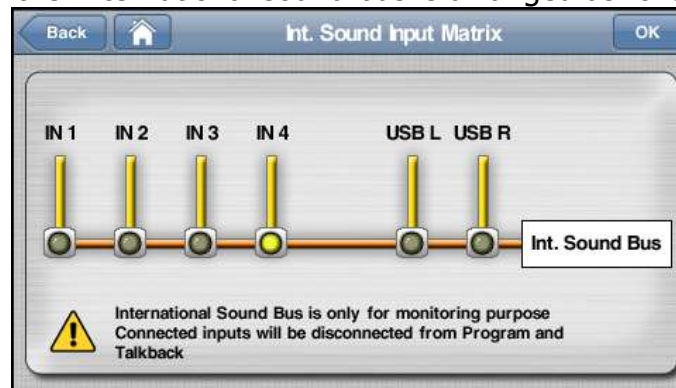

With this matrix layout example following routes are provided:

- IN3 is always and only available for the Talkback bus.
- IN1 and IN2 are mixed together on the PGM bus if *their* TB1 button remains deactivated (*dark*).
- IN1 and IN2 are mixed together on the Talkback bus if *their* TB1 button is active.
- USB L is available only for L channel of the PGM signal. Therefore the USB audio is never available on the talkback bus.
- USB R is available only for R channel of the PGM signal. Therefore the USB audio is never available on the talkback bus.
- IN4 is always and only available *locally* for International Sound monitoring.

V-Quantum HW Manual

IV.2 Audio commentary with video stream decoder

Please refer to the diagram at § I.1 for the overview. This application requires interoperation with an IKUSNET video codec⁹.

IV.2.1 Control

There is an additional control in the main screen allowing establishing the communication with the remote video encoder. This control does not exist in the other Quantum family codecs.



Clicking on the video call key, the following menu appears:



IMPORTANT:

- The call has to be established always from portable to video encoder.
- Call type will be always Rx One way.

⁹ For details about this product please contact sales@prodys.net or check [www.prodys.net /video](http://www.prodys.net/video)

V-Quantum HW Manual

IV.2.2 Configuration

IV.2.2.1. Video Decoder

The only configuration parameter associated with the video decoder is Buffer Rx, found in "Streaming" menu option:



This option allows the definition of a reception buffer operation independent from the audio streaming channels:

IV.2.2.2. Audio associated to video

There are several options to use the audio associated to the video according to the following audio matrices:

Input Matrix


The audio associated to the video can be sent to Program or Talkback channels:




V-Quantum HW Manual

Headphone Matrix

The audio associated to the video can be sent to any headphone output:

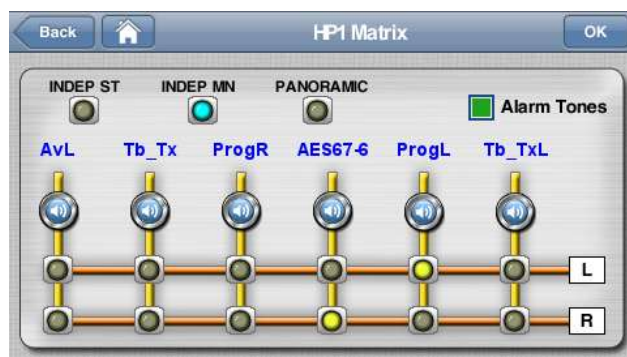


Clicking on the signal names, we can access the selection menu where we can find Av signal (L + R) or each separated channel, AvL and AvR:

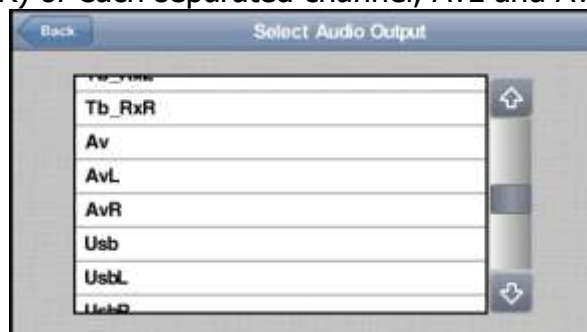

Dante/AES67 Matrix

If the codec has a Dante/AES67 interface, it is also possible to send that signal through that interface:

V-Quantum HW Manual

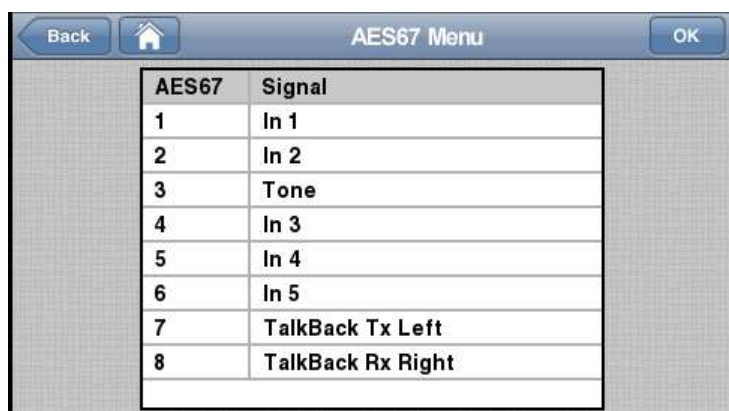

Clicking on each signal it is possible to access the signal selection menu where the audio associated to the incoming video can be found.

IV.2.2.3. Monitoring



The information shown in the main screen is the following:

- Video format detected.
- Video bit rate.
- Compression algorithm mode and bitrate of the associated audio.
- VU-meters of the associated audio.

V-Quantum HW Manual

Chapter V

AUDIO MENU OPTIONS

Let us summarize here all the configuration possibilities for the audio inputs and outputs included in the audio menu:



V.1 Input Menu

There is one individual input configuration menu for each XLR audio input. In each menu, the mode Line/Mic can be selected.

The other parameters that can be set up per audio input:

- Compressor/Limiter (input overdriving protection)
- Automatic Gain Control (not applicable)
- High Pass Filter (Hum suppressor)
- Gain pad (pre-amp -18dB or 0dB)
- Gang input (IN2 & IN3 as stereo inputs)

V-Quantum HW Manual



V.2 Input Matrix Menu


There are five different input matrixes that can be configured independently:

- TB Switch Off: the input will be mixed according this matrix when its TB is not pressed.
- TB Switch On: the input will be mixed according this matrix when its TB is pressed.
- International Sound: The inputs selected in this matrix will be routed to the international Sound bus, that can be assigned only to the headphone mix.
- AES67: Six AES67/DANTE inputs can be routed to Program or Talkback using this matrix.
- AV: The audio associated to the incoming video can be routed to Program or Talkback using this matrix.

V-Quantum HW Manual




The "TB Switch Off" and "TB Switch On" matrixes allow all kind of mixes with the 4 XLR audio inputs and the two USB audio stereo inputs.

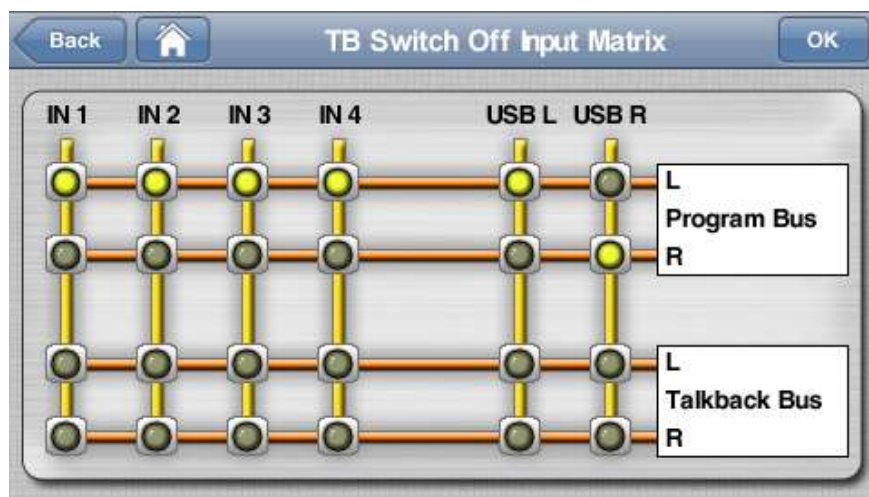


The AES67/DANTE inputs can also be added to the Program and talkback buses:

V-Quantum HW Manual

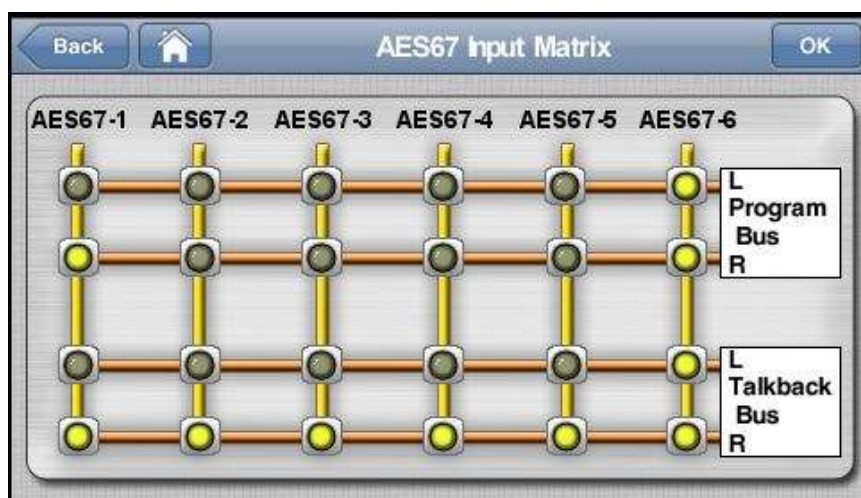

4 XLR audio inputs and the two USB audio stereo inputs can be routed to the International Sound bus but having in mind that including an input in this matrix means that it will be disconnected from the Program and Talkback buses.

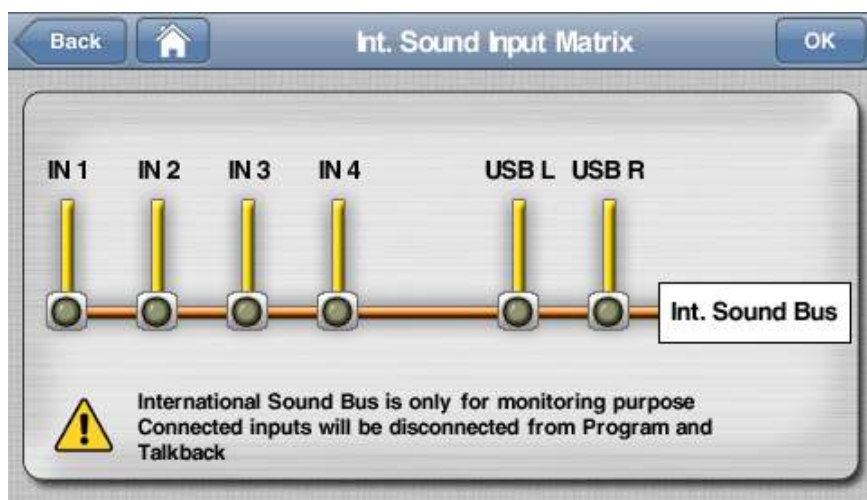

V.3 Audio Outputs Menu


This menu allows the configuration of the three headphone outputs, the stereo auxiliary audio output (OUT) and the USB output.

V-Quantum HW Manual




Adjustment and balance of each headphone may be set in three different modes.

- **Independent Stereo control:** audio level adjusted equally for both ears.
- **Independent Mono control:** audio level adjusted differently for each ear.
- **Panoramic control:** same audio composition on the left and right ear but with and adjustable balance between Tx and Rx.

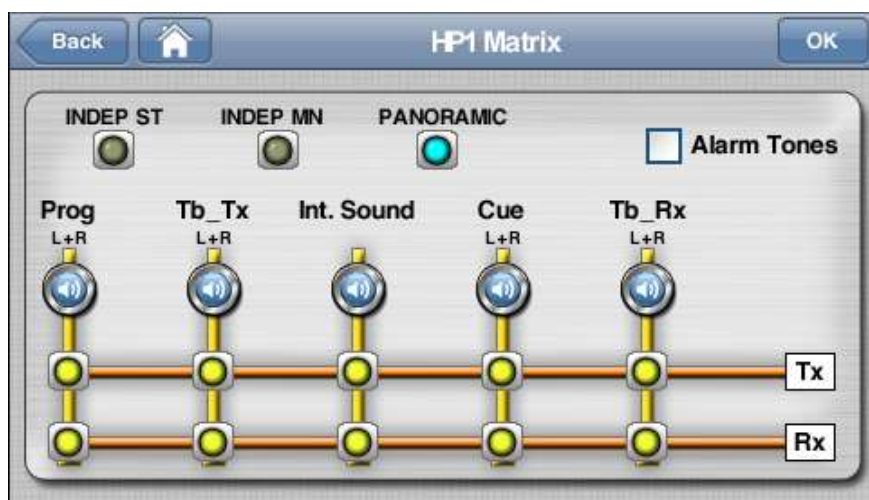


International Sound bus can be included in the headphone matrix but not in the other two outputs: USB and OUT output matrix.

V-Quantum HW Manual

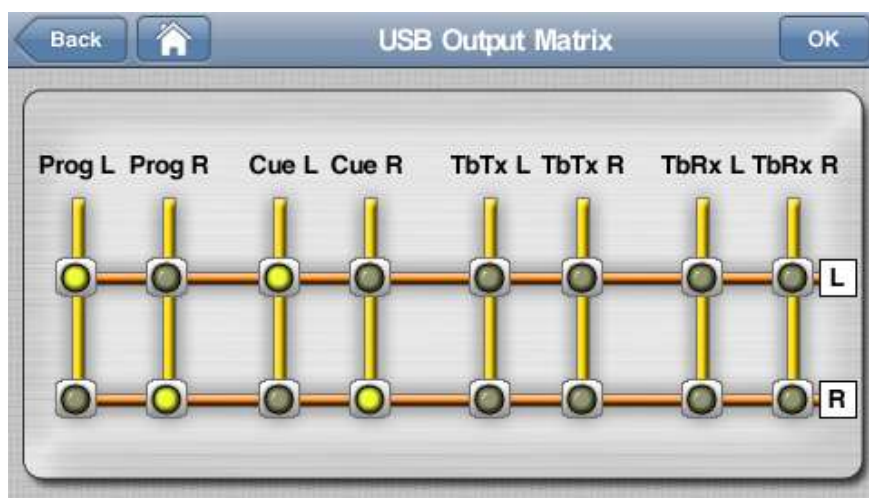

V.4 Misc Menu

The Misc Menu allow to configure a number of features in the audio inputs and outputs control

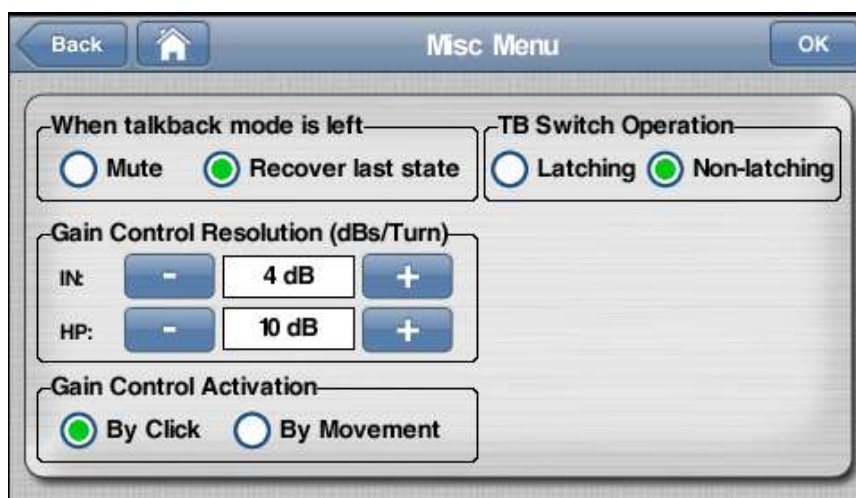

The Misc Menu allow to configure a number of features in the audio inputs and outputs control.

V-Quantum HW Manual

V.5 Encoders menu

The program audio encoder menu allows the configuration of the compression algorithm used in the Program and Talkback channels. The following algorithms are available:

- PCM
- G711
- G722
- MPEG Layer II
- MPEG4 AAC LC
- MPEG4 AAC LD
- MPEG4 AAC HE
- MPEG4 AAC ELD
- APT-X ENH 16
- APT-X ENH 24
- OPUS


The screenshot shows a software interface titled "Program Audio Encoder Menu". It features a header bar with a "Back" button, a home icon, and an "OK" button. The main area contains five configuration rows, each with a label and a value field followed by a menu icon (three dots):

Label	Value
Algorithm:	MPEG4 AAC LC
Bitrate:	256 Kbps
Mode:	STEREO
Frequency:	48 Khz
Packet Time:	21 ms

V.6 Audio Test menu


This menu allows the creation of an Input->Output audio loop and also the insertion of 1 KHz tones in the inputs or outputs.

V-Quantum HW Manual

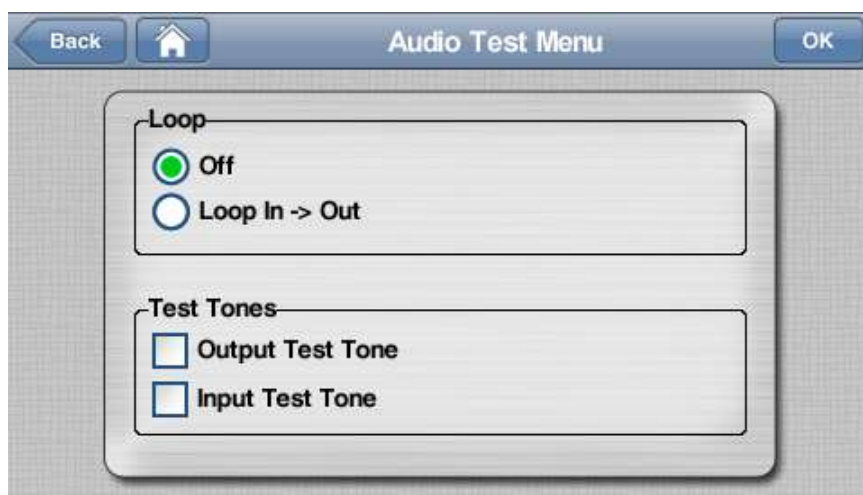

V.7 Audio Gain Level Inputs menu

In this menu it is decided if the inputs are controlled from this menu or from the knobs in the front panel.

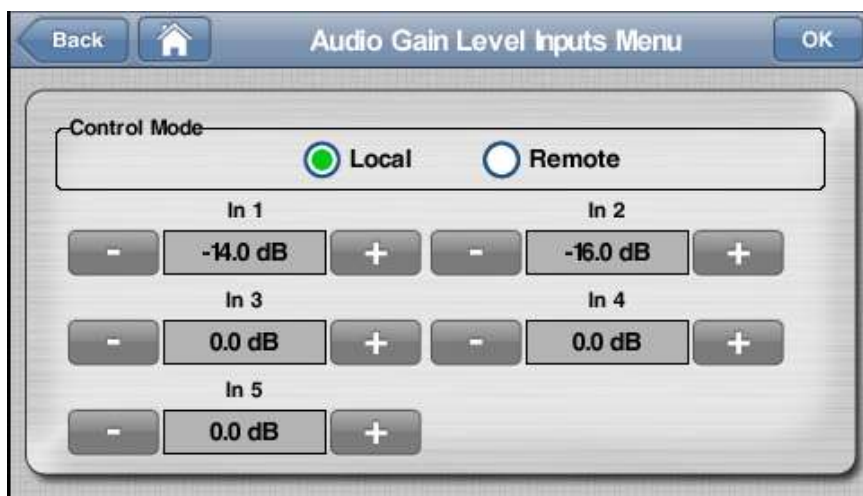


V-Quantum HW Manual

Chapter VI

OTHER INTERFACES

VI.1 Vu-meter indication

Instant Vu-meter indication is provided on four vertical LED bars. It lights green while the input signal matches the proper **dynamic range** (from -50 to -18 dBFs). When the signal surpasses -18 dBFs the lights turn orange. From -12 to 0 dBFs the lights turn red.

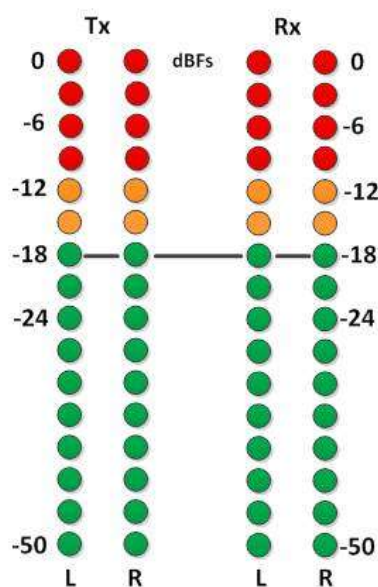

The two LED bars on the left monitor the audio for the program audio input mix.

The two LED bars on the right monitor the audio channel of the incoming PROGRAM stream.

V-Quantum HW Manual

VI.2 Ethernet ports – the LAN1 and LAN2 Connector


The two LAN sockets are standard 1000Base-TX (10/100/1000Mbps) Ethernet connections on a RJ45 plug. For more information about these two ports, please refer to the Quantum Family User Manual.

In the socket there are two leds to indicate different states for the connection and these are very useful in problem-solving situations.



- Green LED → LINK STATUS: ON = Connected
- Orange LED → RECEIVE STATUS: On = Receiving Data.

From the web interface and the touch panel menu it is possible to set the speed and duplex configuration to the following values: AUTO, 10HD, 10FD, 100HD, 100FD. Click on 'Menu', then 'Interfaces', then 'LAN', then 'Ethernet'.

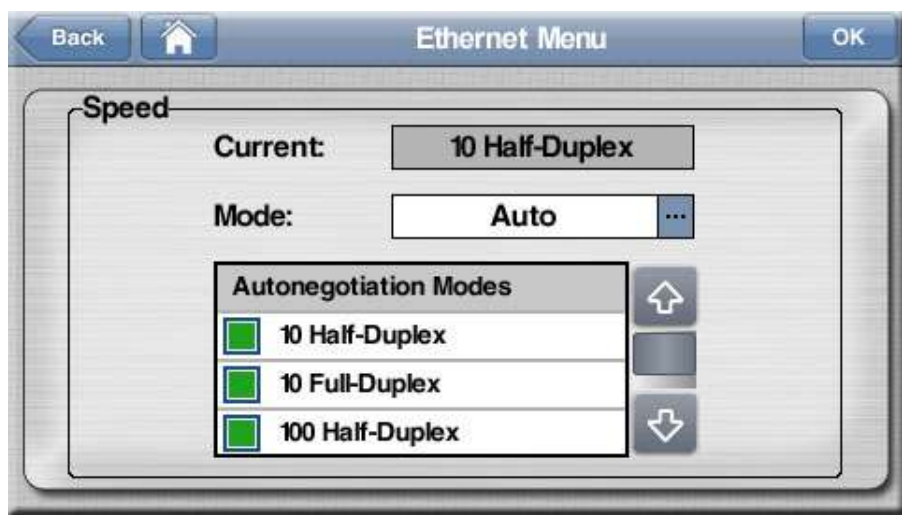

V-Quantum HW Manual

VI.3 USB Port for Wi-Fi

A USB Wi-Fi modem can be supplied optionally with the unit. This Wi-Fi connection can be used for streaming or for bonding to other IP interfaces to stream audio and video data.

Wi-Fi standards: 802.11b, 802.11g, 802.11n

Security protocols: 128-bit WEP, 64-bit WEP, WPA, WPA2.

VI.4 3G/4G Connector

This connector allows the user to plug the external Wireless Communications Module. This module will provide the unit with up to four 3G/4G modems and high gain antennas, to connect to mobile data networks. For more information about the configuration and usage of the 3G/4G connections please refer to the Quantum User Manual.

Supported technologies and frequencies:

LTE (FDD) B1/B2/B3/B5/B7/B8/B20 (2100/1900/1800/850/2600/900/800)

DC-HSPA+/HSPA+/HSPA/UMTS dual-band B1/B2/B5/B8 (2100/1900/850/900)


EDGE/ GPRS/ GSM quad-band 850/900/1800/1900 MHz

LTE 700 (B17) / AWS (1700 uplink; 2100 downlink) (USA AT&T, T-Mobile)

VI.5 RS232 port

The RS232 port is for use as auxiliary data port. This port allows the transmission and reception of data along with encoded audio. Note that this socket is RJ45 connector, as opposed to the typical Sub-D 9 ways connector. To make the conversion between RJ45 and RS232 Sub-D connector there are modular connectors available that should be wired as follows:

V-Quantum HW Manual

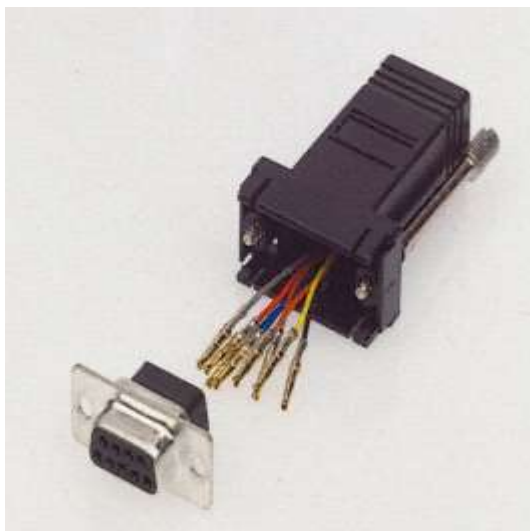

RJ45 Connector	9-pin female D-sub Connector
1 (NC)	1
2 (Rx)	3
3 (GND)	5
4 (NC)	4
5 (NC)	6
6 (GND)	7
7 (Tx)	2
8 (NC)	8

1,4,5,8 must be unconnected

The port is always set to 8 DATA bits, NO parity, 1 START bit and 1 STOP bit. The bit rate can be adjusted to between 300 and 9600 bps via software.

Each V-Quantum acts as a DCE device, therefore the connection to each of the RS232 ports is wired in the following way:

V-Quantum – Pin 7 connector RJ45.....Pin 2 PC

V-Quantum – Pin 2 connector RJ45.....Pin 3 PC


V-Quantum – Pin 3, 6 connector RJ45.....Pin 5 PC

Hardware handshaking signals are ignored.

VI.6 GPIO port

There are two ground contact inputs and two relay outputs mounted on a DB9 female connector.

V-Quantum HW Manual

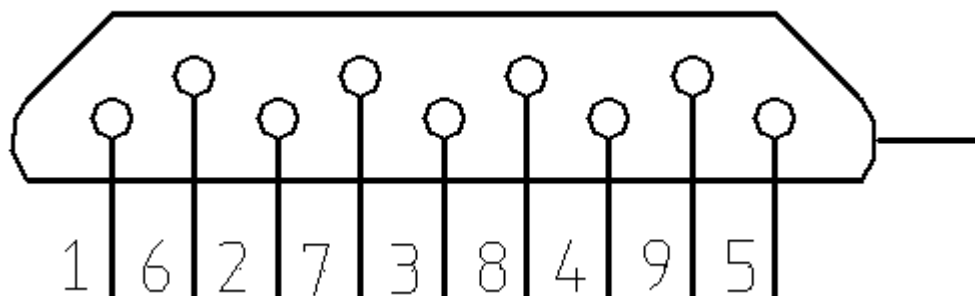

Pin 1	Input 1	Pin 6	Input 2
Pin 2	GND	Pin 7	Normally Closed Relay 1
Pin 3	Common Relay 1	Pin 8	Normally Open Relay 1
Pin 4	Normally Closed Relay 2	Pin 9	Common Relay 2
Pin 5	Normally Open Relay 2		

VI.7 Power supply



V-Quantum comes supplied with an AC/DC converter (19 volts output) to be connected to the power connector (Neutrik) located at the rear panel. The power converter works with an AC input range of 100 to 240 VAC, 50 to 60 Hz.

The power on/off button is located by the left side of the power connector. In order to switch on or switch off the unit, this red button must be pressed for longer than 5 seconds.


In addition, an optional battery pack is also available. When the external power converter is connected, the power is supplied from it, and the battery will be charged if necessary. When the external power converter is unplugged from the unit, the battery will take over.

V-Quantum HW Manual

The PWR and BAT leds on the LED information panel will inform the user about the connection of the external power adaptor and the battery. Please refer to chapter VI.7.1 for more information.

VI.7.1 Power and battery status


The following table describes the **PWR** (Power), **AC** and **BAT** (Battery) LEDs.

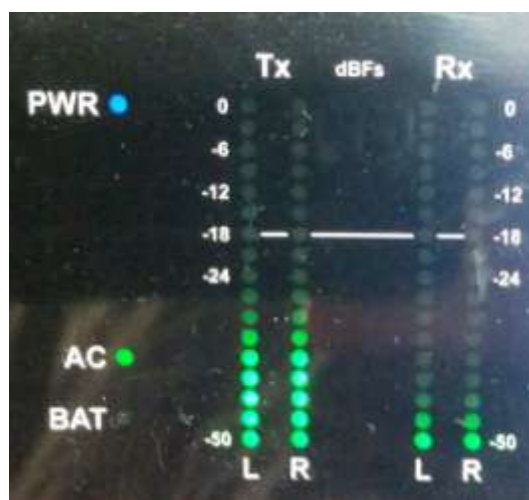

- PWR (Power) LED: This LED will light on when the unit is started.
- AC LED: This LED will light on when the external power adapter is connected to the unit, even if the unit has been switched off.
- BAT: This LED will light on when a battery is connected to the unit.

The unit can be powered from either the external power adapter, or from a battery. When the external power converter is connected, the power is supplied from it, and the battery will be charged if necessary. When the external power converter is unplugged from the unit, the battery will take over.

There are some icons to indicate if the unit is being powered from the external power adapter or from battery:

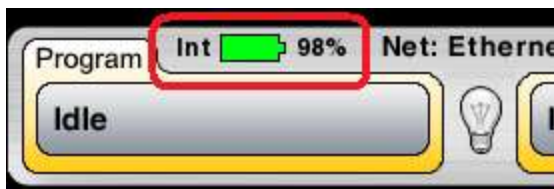

This icon indicates that the unit is being powered from the battery, and the external power adapter is not connected to the unit

V-Quantum HW Manual



The external power adapter is connected to the unit and the battery is charging.

When there is no battery connected to the unit, these icons will not be shown in the user interface.



V-Quantum HW Manual

Chapter VII

TECHNICAL SPECIFICATIONS¹⁰

VII.1 Audio Interfaces

VII.1.1 IN1 – IN3 inputs in MIC MODE

Feature	Value	Requirements
Max. Input Level	-46 dBu	<ul style="list-style-type: none">• knob to 0 dB Gain, no compressor enabled.• 150Ω microphone.• The max input level is for 0 dBFs.
Input stage gain tolerance	±0.5 dB	
Frequency response	-0.3dB	<ul style="list-style-type: none">• 20Hz-20 kHz
Phase difference	< ±3°	<ul style="list-style-type: none">• 20Hz-20 kHz• Input 2 to input 3 and input 4 to input 5• -47 dBu 997Hz test signal
Crosstalk	>80 dB	
Max Input referred noise	< -116 dBqps	<ul style="list-style-type: none">• knob to 0 dB Gain, no compressor enabled.• 200Ω microphone.• Measured 22Hz to 20 kHz
THD+N Ratio	> 75 dB < 0.02%	<ul style="list-style-type: none">• knob to 0 dB Gain, no compressor enabled.• 150Ω microphone.• Measured 22Hz to 20 kHz.• -47 dBu 997Hz test signal
THD	< 0.01%	<ul style="list-style-type: none">• Measured with Tektronix AM700.• Excludes noise contribution
Max input impedance	2 kΩ	<ul style="list-style-type: none">• differential
Phantom Power	+48V	<ul style="list-style-type: none">• switchable
Compressor ratio	1:3	<ul style="list-style-type: none">•
Compressor Knee	-7.5 dBFs	<ul style="list-style-type: none">• hard knee
THD+N Ratio	<0.1%	<ul style="list-style-type: none">• 150Ω microphone.• Measured 22Hz to 20 kHz• From knee to clipping

- XLR connectors.
- Maximum levels:
 - LINE levels: +20dBu.

¹⁰ Ratings might be changed without any prior communication.

V-Quantum HW Manual

- MIC levels: -46dBu (without compressor).
- MIC levels: -33dBu (with compressor).
- Input impedance:
 - LINE mode = 24Kohm.
 - MIC mode = 4Kohm.
- Mic input sensitivity adjustable from -25 to -65 dBu.
- THD+N < 0.02% (MIC mode), 0.005% (LINE mode). @ 1kHz.
- SNR > 75dB (MIC mode), 95dB (LINE mode).
- Phantom power (48 Volts).

VII.1.2 IN1 – IN4 inputs in LINE MODE

Feature	Value	Requirements
Max. Input Level	+20 dBu	<ul style="list-style-type: none"> • knob to 0 dB Gain, no compressor enabled. • 40Ω line driver. • Measured 22Hz to 20 kHz
Input stage gain tolerance	±0.5 dB	
Frequency response	-0.3dB	<ul style="list-style-type: none"> • 20Hz-20 kHz
Phase difference	<±3°	<ul style="list-style-type: none"> • 20Hz-20 kHz • Input 2 to input 3 and input 4 to input 5 • -47 dBu 997Hz test signal
Crosstalk	>90 dB	
Noise Level	<-94 dBFs	<ul style="list-style-type: none"> • knob to 0 dB Gain, no compressor enabled. • 40Ω line driver. • Measured 22Hz to 20 kHz
THD+N Ratio	> 93 dB < 0.005%	<ul style="list-style-type: none"> • knob to 0 dB Gain, no compressor enabled. • 40Ω line driver. • Measured 22Hz to 20 kHz. • 19 dBu 997Hz test signal
Max input impedance	24 kΩ	<ul style="list-style-type: none"> • differential
Phantom Power	+48V	<ul style="list-style-type: none"> • switchable
Compressor ratio	1:3	
Compressor Knee	-7.5 dBFs	<ul style="list-style-type: none"> • hard knee
THD+N Ratio	<0.1%	<ul style="list-style-type: none"> • 200Ω microphone. • Measured 22Hz to 20 kHz • From knee to clipping

V-Quantum HW Manual

VII.2 Headphone 1 - 3 outputs

Feature	Value	Requirements
Max. Output Level	+12.2 dBu	• 0dBfs, Zload 100 k Ω , knob to 0 dB gain, 0dBfs
	+11.6 dBu	• 0dBfs, Zload 300 Ω , knob to 0 dB gain, 0dBfs
Output level tolerance	± 0.3 dB	
Max. Output Power	90mWrms	• 75 Ω load, clipping 997Hz test signal
Frequency response	-0.3 dB	• 20Hz-20 kHz, 300 Ω load
Phase difference	$< \pm 3^\circ$	• 20Hz-20 kHz
Crosstalk	> 90 dB	• -1 dBfs 997Hz test signal
		• Zload 300 Ω
Noise Level	< -90 dBu	• Measured 22Hz to 20 kHz, knob to 0 dB gain
THD+N Ratio	> 93 dB $< 0.005\%$	• Measured 22Hz to 20 kHz, knob to 0 dB gain
		• -1 dBfs 997Hz test signal.
		• Zload 300 Ω .
Output impedance	24 Ω	

- 6.3mm Jack connector
- Headphone impedance range: 300 – 2K ohms.
- Output Impedance < 25 ohms.
- Bandwidth 20Hz-20kHz (1dB).
- Maximum output level: 12dBu on 300 ohms.
- THD+N $< 0.01\%$ @ 1kHz.
- SNR > 92 dB.
- Independent audio sources (local o return) for left and right.
- Independent level adjustment for each output.

VII.3 AUX output

Feature	Value	Requirements
Max. Output Level	+12.2 dBu	• 0dBfs, Zload 100 k Ω , knob to 0 dB gain, 0dBfs
	+11.6 dBu	• 0dBfs, Zload 300 Ω , knob to 0 dB gain, 0dBfs
Output level tolerance	± 0.3 dB	
Max. Output Power	90mWrms	• 75 Ω load, clipping 997Hz test signal
Frequency response	-0.3 dB	• 20Hz-20 kHz, 300 Ω load
Phase difference	$< \pm 3^\circ$	• 20Hz-20 kHz
Crosstalk	> 90 dB	• -1 dBfs 997Hz test signal
		• Zload 300 Ω
Noise Level	< -90 dBu	• Measured 22Hz to 20 kHz, knob to 0 dB gain
THD+N Ratio	> 93 dB $< 0.005\%$	• Measured 22Hz to 20 kHz, knob to 0 dB gain
		• -1 dBfs 997Hz test signal.
		• Zload 300 Ω .
Output impedance	24 Ω	

V-Quantum HW Manual

VII.4 USB Audio interface

- USB 2.0 Audio Interface.

VII.5 Compression¹¹

- G722.
- G711 A/μ Law.
- MPEG 1,2 layer II (ISO/IEC 11172-3 /13818-3).
- MPEG 2 AAC LC (ISO/IEC 13818-7).
- MPEG 4 AAC LC, LD, ELD & HE (ISO/IEC 14496-3).
- Enhanced aptX™.
- OPUS

VII.6 Communication ports

VII.6.1 LAN port

- 10/100/1000 Base-TX Ethernet with auto-negotiation.
- RJ-45 connector.

VII.6.2 GPIO port

- DB9F connector.
- 2 ground contact inputs.
- 2 NA/NC relay outputs.
 - Max voltage: 125VAC (0.5A), 110VDC (0.3A), 30VDC (1A).
 - Max. current: 2A.

VII.6.3 RS232 port

- RJ45 connector.

VII.7 Power supply.

- Universal Input Range.
- AC input range: 100-240 V.
- Frequency range: 50-60 Hz.

¹¹ Some compression modes are available as an option. Please contact sales@prodys.net for more information.

V-Quantum HW Manual

- Output Power: 30W (with battery in charge status).
- Li-Pol battery pack (optional). Max. autonomy: 4 hours.

VII.8 Weight and dimensions

- Height: 70 mm; Width: 280mm, height 75mm and depth 205mm.
- Weight: 2.29 Kg.

V-Quantum HW Manual

Chapter VIII

DIP SWITCHES AND BATTERY INSTALLATION


VIII.1 Restore factory default setting (microswitches)

There are 8 microswitches on the bottom side of V-Quantum which are reserved for special functions. The microswitches are protected with a removable cover. The cover must be removed with a Torx-10 tool if access to the switches is required or the optional battery is fixed on the bottom side.



V-Quantum HW Manual

By default all the switches must be in OFF position according the picture. The inverted view is according the codec position on the previous picture.

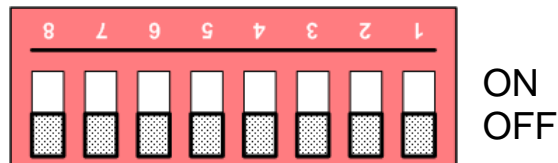

Switch number 7 will restore the default **factory configuration if set ON before a power cycle.**

The IP address is changed to a DHCP IP configuration. In case a DHCP server is not available on the network the address is set to 192.168.100.100 and the net mask to 255.255.255.0.

After the factory default setting the switch number 7 must return to the OFF position for usual operation.

VIII.2 Optional battery installation

An optional battery can be attached to the V-Quantum. The battery not only allows independence for portable applications, but also redundancy if the main power cannot avoid large voltage dips; since the codec operates continuously without care of those impairments.

The battery is attached on the bottom side of the V-Quantum unit. Following procedure is indicated for installation:

1. Switch OFF the unit.
2. Look for the battery connector at the bottom panel of the unit (Picture 3).
3. Place the battery, checking that no room is between codec and battery surfaces. The battery has to dock on the proper bottom connector. (Picture 3)
4. Fix the battery on each corner with the screws supplied with the battery.
5. Switch ON the unit. The unit should be able to boot without the main power cord connected.

V-Quantum HW Manual



V-Quantum HW Manual

VIII.3 Battery maintenance and precautions

To ensure your battery maintains its maximum capacity, operate the V-Quantum codec on battery power at least once a month. The Lithium-Ion battery has no memory effect so it is not necessary to let the battery fully discharge each time. **However, for a better accuracy of the battery meter, it is helpful to fully discharge periodically.** If the Quantum unit is continuously operated on AC power only for an extended period, the battery may fail to retain charge. This may shorten the life of the battery and may cause the meter to be inaccurate. Eventually the Quantum unit will show the message **<Battery Not Present>**.

If the Quantum unit with a battery pack is kept on a long time storage, it is mandatory to charge the battery each 3 months up to 50% of the capacity.

However, for a better accuracy of the battery meter, it is helpful to fully discharge before recharging to the 50%.

The battery internal charging temperature range allowed is 0° to 45°C (or 32° to 113°F). Keep in mind that the battery is charging if the AC main power is available to the codec!

VIII.3.1 Battery precautions

- Avoid humidity.
- If the battery is removed from the unit, avoid short circuits among the copper terminals of the battery interface, metal surfaces, etc.
- Keep the battery away from fire and excessive temperatures.
- The battery **internal charging temperature range allowed is 0° to 45°C (or 32° to 113°F)**. Special consideration is required for the upper limit, since the desktop surface under the V-Quantum unit may heat the battery up over this limit (eg. dark desktops under sunlight, electronic equipments underneath the unit, etc.). **Keep in mind that the battery is charging if the AC main power is available to the codec!**

V-Quantum HW Manual

- The battery internal **discharging temperature range** allowed meets Quantum's ambient operating temperature range of 0° to 45°C.
- Remove a defective battery immediately if you detect unusual chemical smell or some trace of substances spilling out. **Avoid contacting the chemicals.**
- Remove the battery if the unit is indicating **<Battery Not Present>** and contact support@prodys.net for further instructions.